

SAMSUNG



Smart Hub

USER GUIDE

Samsung  SMART HUB

Contents

Configuring Your Network Connection: First Steps	3	Working with Icons	14
• For Wired Networks	4	• Moving an Icon	14
• For Wireless Networks	5	• Create New Folder	15
Upgrading the Software	7	• Inserting an Icon into a Folder	15
Running Smart Hub	9	• Renaming a Folder	16
Creating Your Samsung Account	10	• Locking an App	17
Logging into the Smart Hub Service	11	• Unlocking an App	18
Logging out of the Smart Hub Service	11	Registering Your Samsung Account	19
Resetting a Forgotten Password	12	Using Samsung Apps	21
Removing a Smart Hub Account from the TV Account List	12	Using the Smart Search function	22
Sorting Icons	14		

※ The functions may vary depending on your player model.

※ The figures in this manual are drawn for illustration purposes, and may differ somewhat from the actual appearance of the product.


Configuring Your Network Connection: First Steps

1 Press the [HOME] button on the remote control.


※ If you have a wireless network, make sure the access point you want to connect your player to is turned on. The access point can be a wireless router, modem, etc. If you have a wired network, connect one end of a LAN cable to the LAN port on the back of your player and the other end to a router or modem.




2 On the Home screen, move to <Settings>, and then press the [Enter] button.

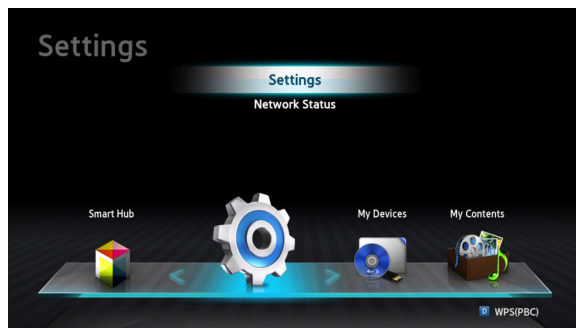

3 Move to <Network>, and then press the [Enter] button.

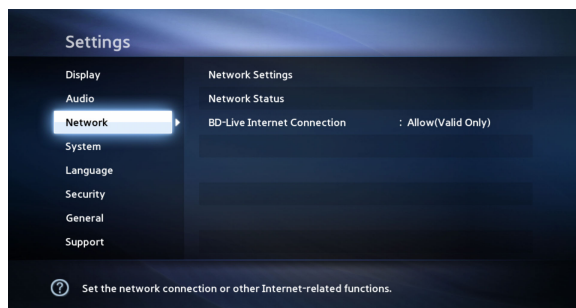

4 Move to <Network Settings>, and then press the [Enter] button.

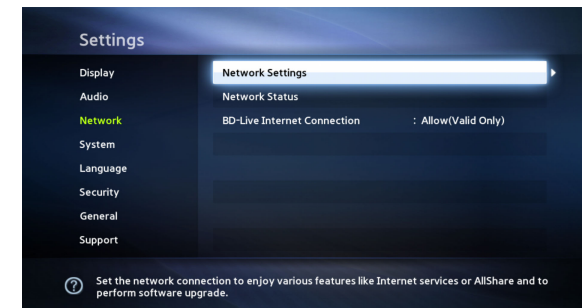

5 When the Network Settings window is displayed, go to "For Wired Networks" on page 4 or "For Wireless Networks" on page 5 to complete the network configuration.

※ Your player supports various network configuration methods (Wired/Wireless, WPS (PBC)) that let you configure your network easily and quickly.




I For Wired Networks

Wired - Automatic

Use the automatic procedure if your network does not require a Static IP address. Most networks do not require a Static IP address.

- 1 Select **Wired** in the Network Settings screen, and then press the  button.

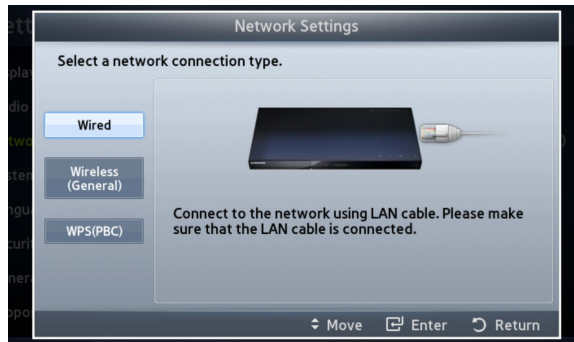

- 2 The player verifies the network connection and then connects to the network. Press the  button when the network connection process is complete.



Wired - Manual Configuration

If you have a static IP address or the Automatic procedure does not work, you'll need to set the Network Settings values manually.

- 1 Select **<Wired>** in the Network Settings screen, and then press the  button. The Network Status screen appears. The player attempts to verify the network connection and fails.

- 2 Select **<IP Settings>** on the right of the screen, and then press the  button. The IP Settings screen appears.



- 3 Select the **IP Mode** field, and then set it to Manual.

- 4** Use the number keypad on your remote to enter the Network values. Use the ▲▼◀▶ buttons on the remote to move from entry field to entry field.

 You can get these values from your Internet provider. You can also view these values on most Windows computers.


- 5** When done, highlight **OK**, and then press  button. The player verifies the network connection and then connects to the network.



For Wireless Networks

- 1** Make sure the access point you want to connect your player to is turned on. The access point can be a wireless router, modem, etc.

- 2** Select **Wireless (General)** in the Network Settings menu, and then press the  button.

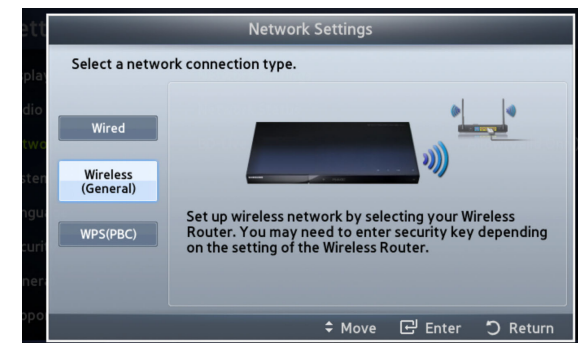

- 3** Press the  button. Your player starts scanning for access points. When done, it displays a list of access points it has found.



- 4** Move to the access point you want to connect your player to, and then press the  button.



- 5** Press the  button. The player connects to your network.

-  If your network has the Enter Security Key window appears. Use the keyboard to enter the key. When done, use the     buttons to select **Done**, press the  button, and then go to Step 6.



- 5¹** If you want to use a fixed IP address, select **<IP Settings>** on the screen, and then enter the required IP address settings manually.

- IP Address
- Subnet Mask
- Gateway
- DNS Server



- 6** After you have finished configuring the network settings, press the **<OK>** button.



✓ When using a device that supports WPS

1. Perform steps 1 to 5 in “Configuring the Network: First Steps”.
2. Select “WPS(PBC)”.
3. Follow the instructions displayed on the screen.

Notes

- Devices that support WPS have a WPS (PBC) button.


Upgrading the Software

From time to time, Samsung makes updated the software available. To install the updated software on your player, follow the instructions below.


- 1 Press the [**HOME**] button on the remote control.



- 2 On the Home screen, move to <Settings>, and then press the  button.

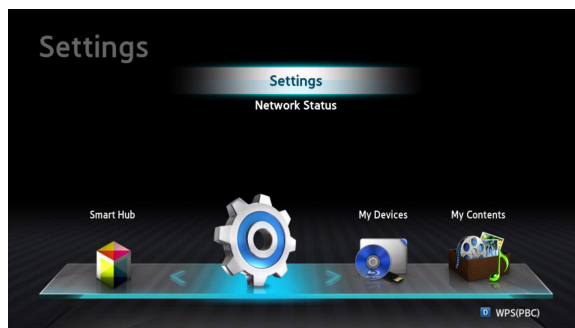


- 3 Move to <Support>, and then press the  button.

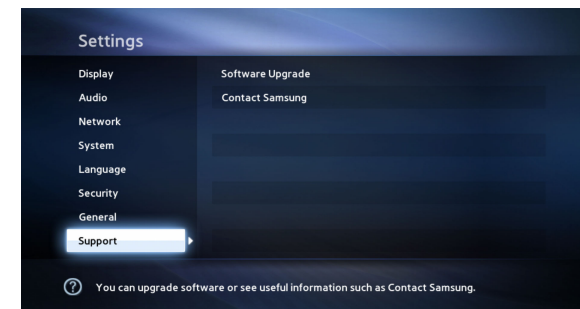


- 4 Move to the <Software Upgrade> item and press the  button.



- 5 The software that needs to be upgraded is searched for and installed automatically.

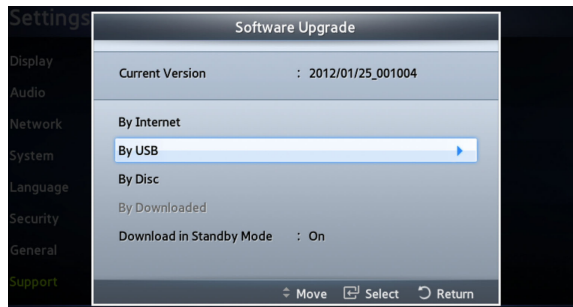

- 6 Upgrade display window may differ from each method.

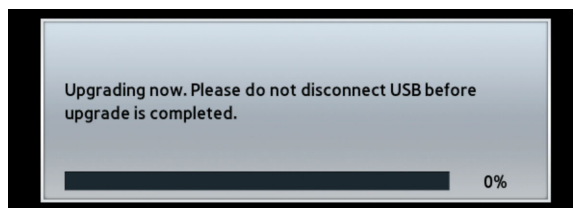

- 7 Other apps are upgraded automatically when they are run.


Running Smart Hub

- 1 Press the [SMART HUB] button on the remote control.




- 2 When you run the Smart Hub service for the first time, the Samsung Service Terms and Conditions are displayed. Read the Terms, and then if you agree, select the <Agree> button to continue. button and press  to continue.

※ If you select the <Disagree> button, you will not be able to use the Smart Hub service.

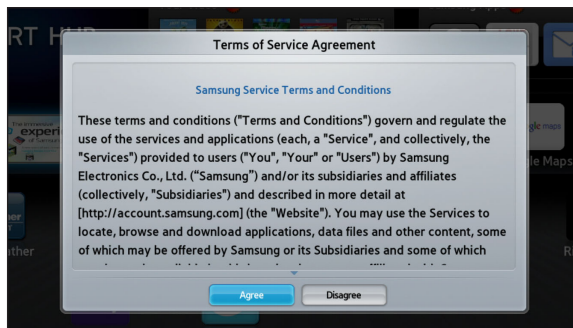


- 3 The Samsung Privacy Policy window appears. Read the Policy, and then if you agree, select the <Agree> button and press  to continue.

※ If you select the <Disagree> button, you will not be able to receive the Smart Hub service.

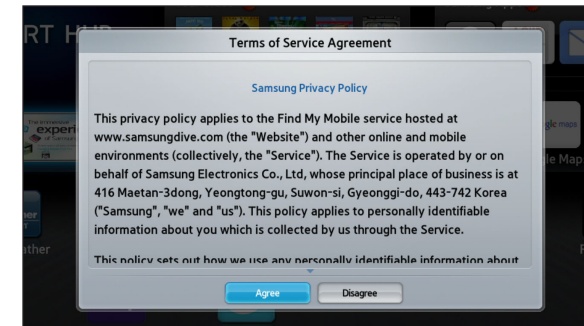

- 4 When the Update Smart Hub window is displayed, select the <OK> and then press the  button.

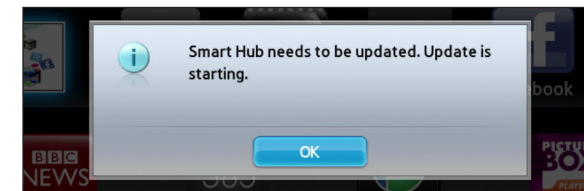


Creating Your Samsung Account

- 1 Press the [SMART HUB] button on the remote control.




- 2 Press the red [A] button on the remote control to display the Login window. (For a description of the button, see the bottom of the screen.)

- 3 When the Login window appears, select the <Create Account> button, and then press the [Enter] button.

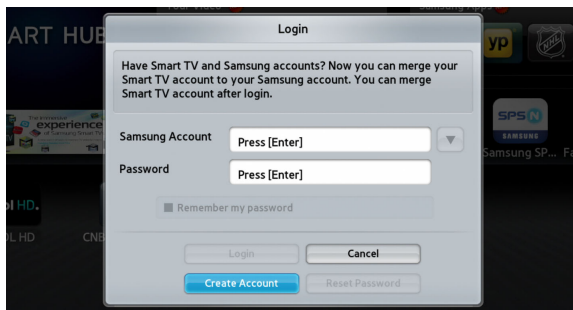

- 4 Move to the **Samsung account** field, and then press the [Enter] button. A window appears with an entry screen and a keypad. Using the keypad, enter an e-mail address that will serve as your ID.

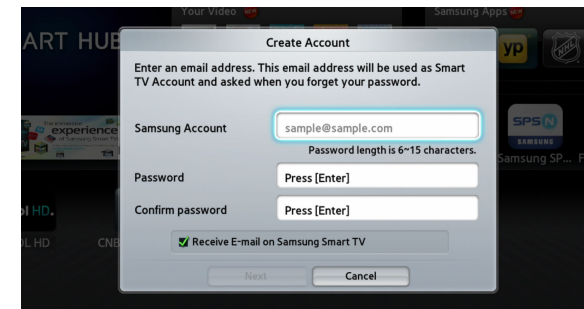

The account must be a valid e-mail address in the following format: sample@sample.com or sample@sample.net. Next, enter a password in the password field and the same password in the Confirm Password field in the same fashion.

- 5 After entering all items, move to the <Create Account> item, and then press the [Enter] button. Your account will be created.


Logging into the Smart Hub Service

- 1 Press the [SMART HUB] button on the remote control to run Smart Hub.



- 2 Press the red [A] button on the remote control to display the Login window. (For a description of the button, see the bottom of the screen.)


- 3 In the Login window, enter your ID and password. Select <Login> at the bottom of the window, and then press the [Enter] button.

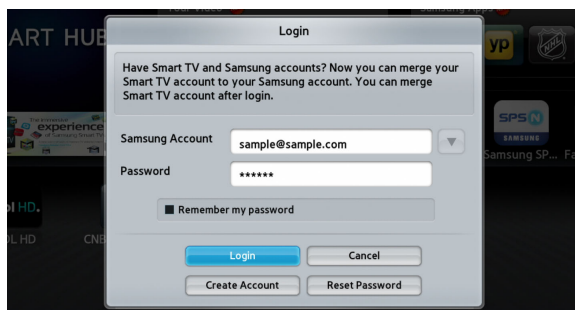

Logging out of the Smart Hub Service

- 1 While you are being logged into the Smart Hub service, press the [A] button on the remote control.


- 2 When the Confirm Logout window is displayed, move to <OK>, and then press the [Enter] button.

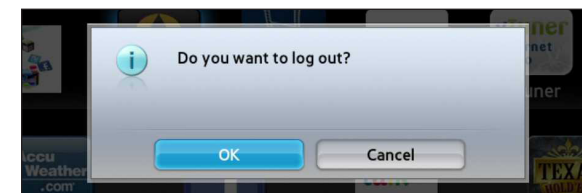


Resetting a Forgotten Password

If you forget your password, follow the instructions below.

- 1 Enter the account (email address) for the password you have forgotten, move to <Reset Password>, and then press the  button.

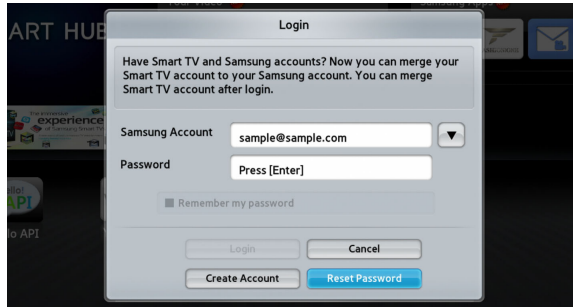

- 2 A confirmation window is displayed which says that the guide will be sent to the email address (account) you entered. Move to the <OK>, and then press the  button.

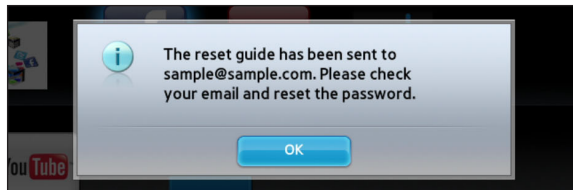

- 3 Follow the guide to reset your password.

Removing a Smart Hub Account from the TV Account List


- 1 Press the [SMART HUB] button on the remote control to run the Smart Hub.




- 2 Press the  button on the remote control to display the Settings window.

※ For a description of the button, see the bottom of the screen.

- 3** Move to the **<Account Management>** item, and then press the  button.

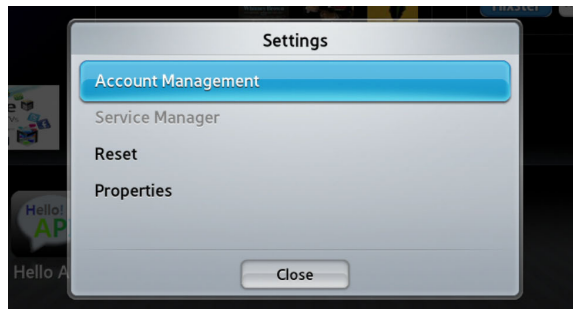


- 5** Enter your password and press the **<OK>** button, and then press .

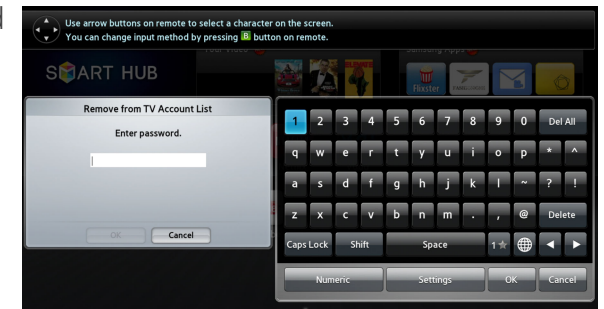

- 4** Move to the **<Remove from TV Account List>** item, and then press the  button.



- 6** A confirmation window is displayed asking you to confirm the deletion. Move to the **<OK>** button, and then press  to delete the current account from the TV Account List.

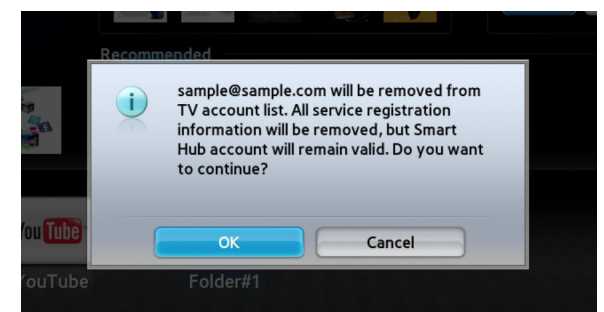


Sorting Icons

- 1 Press the [SMART HUB] button on the remote control to run the Smart Hub.



- 2 Press the green [B] button on the remote control to display the Sort Keys window. (For a description of the button, see the bottom of the screen.)

- 3 You can sort icons in various ways. Move to the sorting method you want to use, and then press the [Enter] button. You can select Name, Date Installed, Frequency, Category, User Defined, or Default.

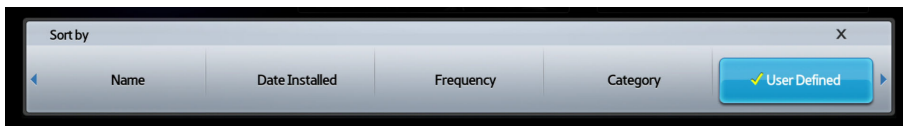

Working with Icons


Press the [SMART HUB] button on the remote control to run Smart Hub, and then move to the icon you want to do.

Moving an Icon

- 1 Press the yellow [C] button on the remote control to enter the Edit Mode.




- 2 Select the icons you want to move.

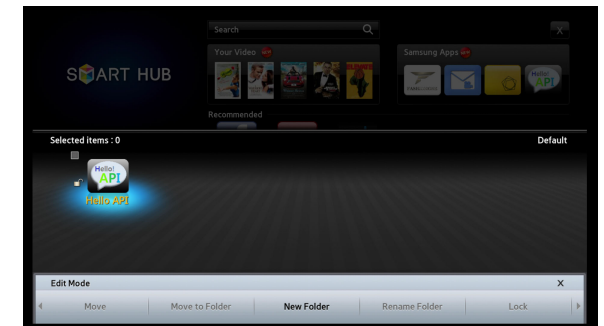


- 3 Select the **Move**, and then press the [Enter] button.

Create New Folder

- 1 Press the yellow **C** button on the remote control to enter the Edit Mode, and then select **<New Folder>**.

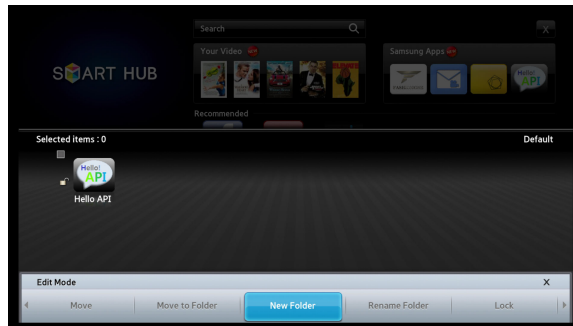

- 2 Enter the name of the folder you want to create, and then press the **C** button. The folder and its corresponding folder icon are created.

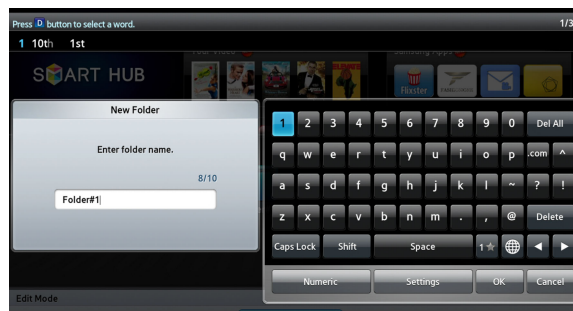


Inserting an Icon into a Folder

- 1 Move to the icon you want to move.




- 2 Press the yellow **C** button on the remote control to enter the Edit Mode.

- 3 Select the icons to move to folder, and then select the **<Move to Folder>**.

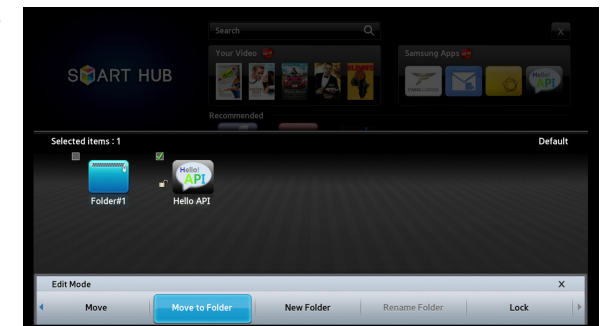

- 4 A list of the folders you can move the icon to is displayed. Move to the folder you want, and then press the **C** button.

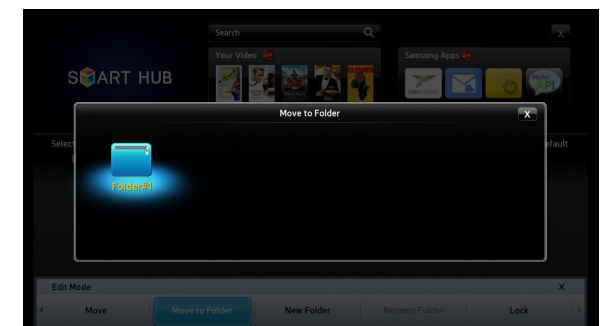


Renaming a Folder


- 1 Move to the icon you want to rename, and then press the yellow **C** button on the remote control to enter the **Edit Mode**.



- 3 Enter the new name you want to apply to the selected folder, and then press the **C** button. The name of the selected folder is changed.

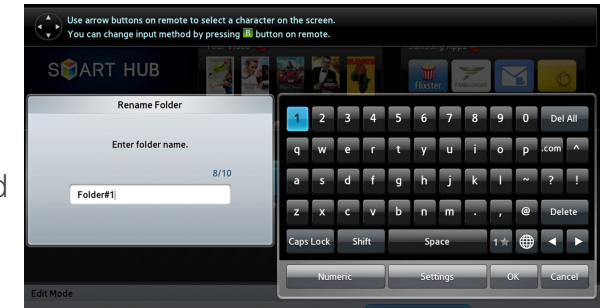

- 2 Move to the **<Rename Folder>** item using the arrow buttons, and then press the **C** button.

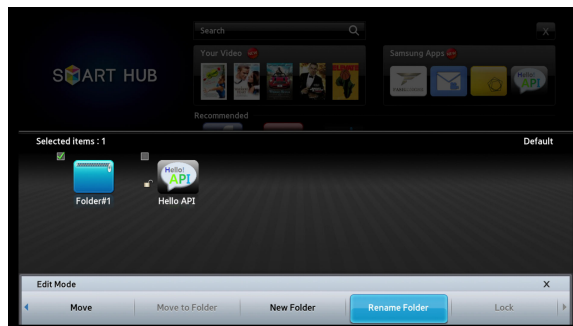


I Locking an App

- You can lock specific apps to prevent other persons from using them. (You cannot lock the folders and the apps provided by default.)


1 Move to the icon you want to lock, and then press the yellow **C** button on the remote control.



2 Select the icons to lock, and then select the **<Lock>**.

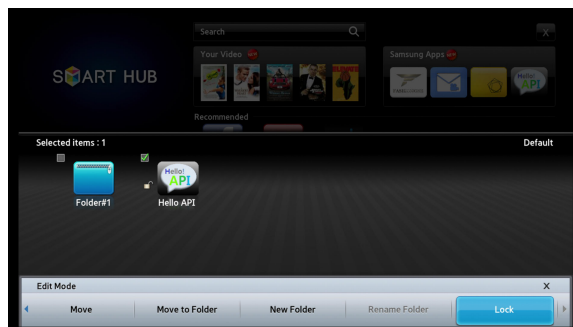

3 Enter a password which is 4 characters long. The Service Lock Activated pop-up appears. Press the **⏏** button. The Lock symbol next to the app closes. You now must enter the password to access the app.

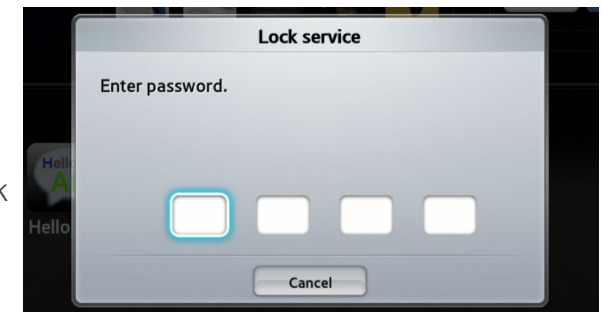


I Unlocking an App


- 1 Move to the icon of the app you want to access, and then press the yellow **C** button on the remote control.



- 3 Enter the correct 4 character password. The Service Lock Released pop-up appears. Press the **C** button. The lock symbol next to the app opens. To re-lock, follow the steps on page 17.

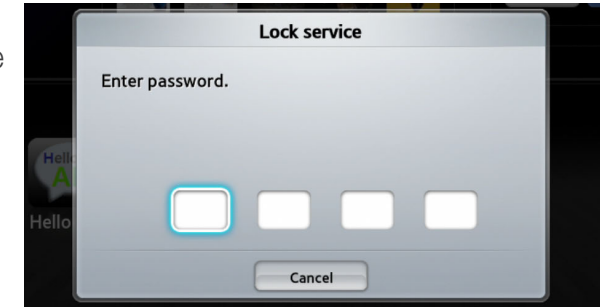


- 2 Select the icons to unlock, and then select the **<Unlock>**.

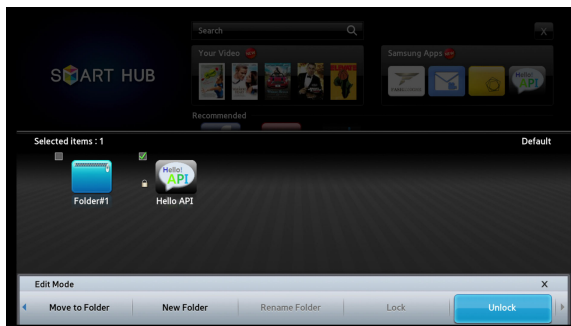


Registering Your Samsung Account

1 Connect to <http://www.samsung.com/> from a computer, and then create a new account.

The contents of the homepage may differ from country to country.

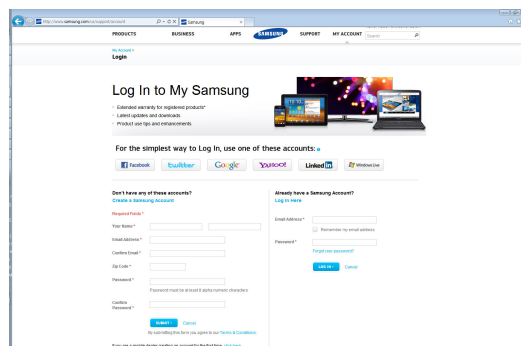

2 You need cash to install a paid app. You can charge your cash card. (For more information, refer to the instructions provided on the website.)

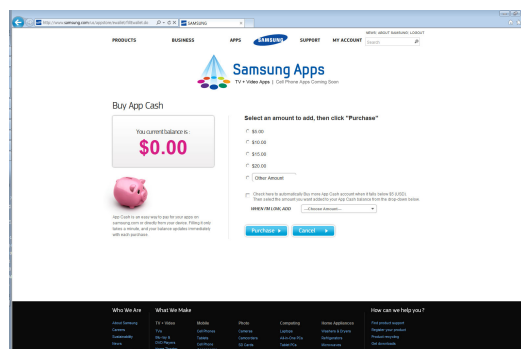


3 Press the [SMART HUB] button on the remote control to run Smart Hub.




4 Press the blue **D** button on the remote control to display the Settings window.

※ For a description of the button, see the bottom of the screen.


- 5** Move to the **<Account Management>** item, and then press the  button.

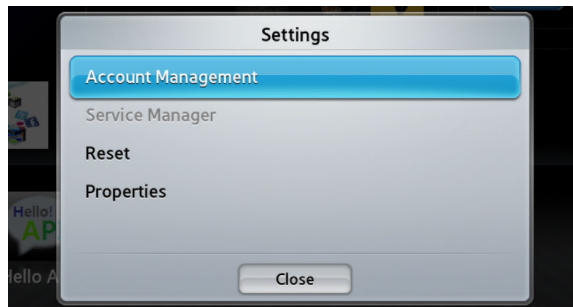

- 7** Press the  button on the Samsung Apps item to change its subscription settings. Select the **<Register>** item, and then press .

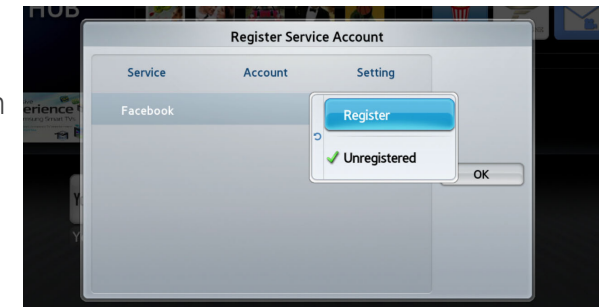

- 6** Move to the **<Register Service Account>** item, and then press the  button.

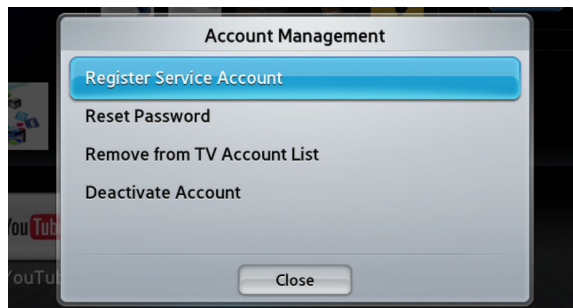

- 8** Enter the account ID and password you created on "<http://www.samsung.com/>", move to the **<OK>** button, and then press . When registered service is run, you will be logged into the registered Service using the entered account information.



Using Samsung Apps

- 1 Press the [SMART HUB] button on the remote control to run the Smart Hub.




- 2 Run "Samsung Apps" located at the middle left of the screen.




- 3 You must have a Samsung Apps account to install a paid app. If you do not have an account, register an account by referring to the section in this manual that describes how to register a Samsung account. (refer to page 19~20.)


- 4 Move to the icon of the app you want to install, and then press the [G] button. The App Details window showing the information on the selected app is displayed.

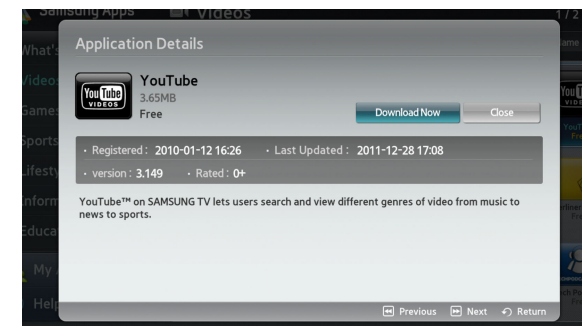

- 5** Move to the <Download Now> item, and then press the  button to start the installation.

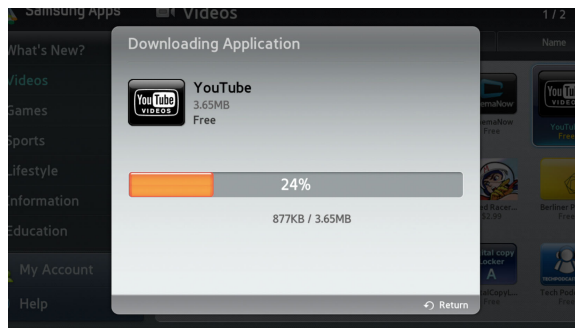

- 6** When the installation is finished, an icon for the installed app is automatically displayed on the screen for convenience.

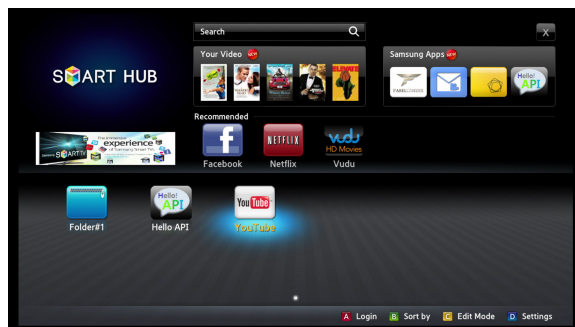


Using the Smart Search function


You can search for information using the Smart Search window.

In addition, you can view a list of popular search words and a list of popular apps.

- 1** Move to the <Search> item in the Smart Hub Home screen, and then press the  button.

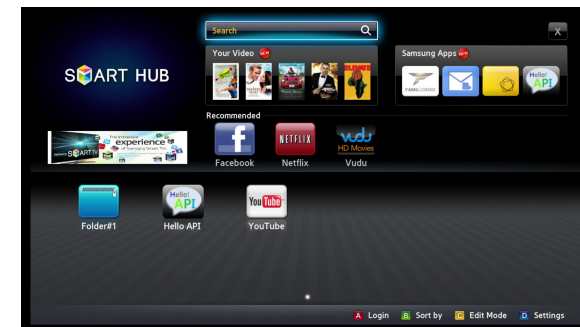


- 2** The Smart Search window is displayed.

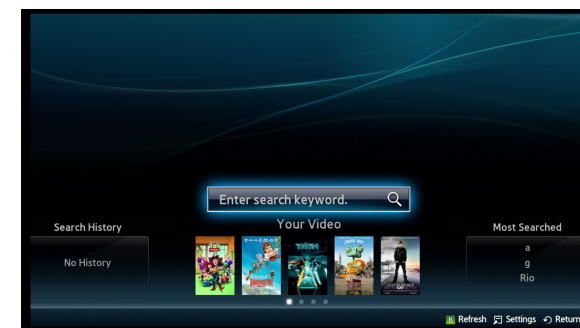


- 3** Enter the words you want to use as the search term. To select one of the popular search words on the bottom of the screen, move to the item using the arrows keys, and then press the  button.


- 4** The search results for the words you entered are displayed.

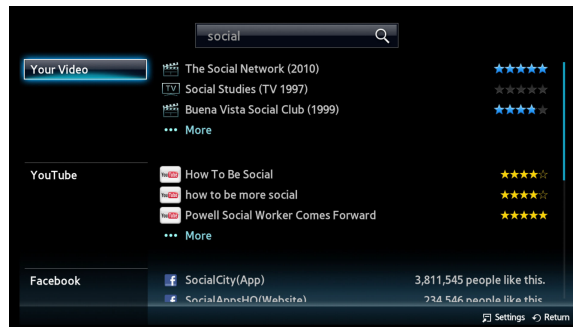

- 4.1** If you select one of the popular apps at the bottom of the screen, Smart Search will search for information related to the app.

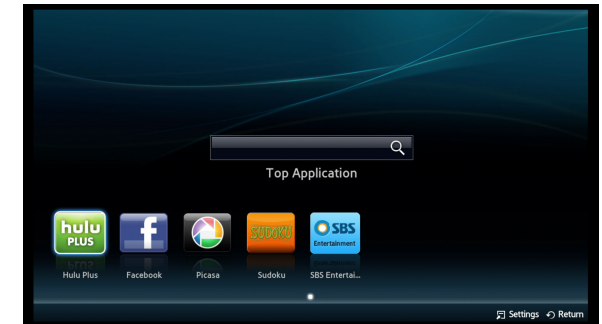

- 4.2** To install an app displayed in the Samsung Apps section of the Search Results window, move to the app, and then press the  button.

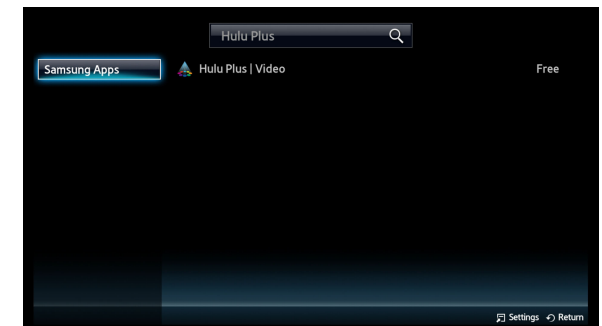

- 4.3** For installation, you will be moved to the Samsung Apps screen. For more information on the installation, refer to “Using Samsung Apps”.